

# Please Read the Following Message

Thank you for purchasing a Fairway Beverage Cart for your E-Z-GO Utility Vehicle! All information necessary to prepare and install your cart is included in these pages. It is important that these instructions be read and followed thoroughly, and applied in the proper order. Failure to do so can result in damaged materials and improper alignment.

## IMPORTANT!!!

Please save all E-Z-GO factory supplied hardware upon disassembly of the polybox. They are required for proper installation of the Fairway Café Beverage Cart.

## Contact Information

If you need further assistance with installation, or have any questions pertaining to the state of equipment you received, please give us a call. We're happy to help! You can reach us at the phone number located below during hours of operation, or you can visit our website (also located below) and fill out a contact form at any time.

Our hours of operation are as follows (Eastern Standard Time):

**Monday to Thursday: 8 AM to 5 PM**

**Fridays: 8 AM to 3 PM**

With that out of the way, let's get started!



[www.golfbeveragecart.com](http://www.golfbeveragecart.com)



1 (866) 603-2220

# Section 1: Prepare for Installation

## Step 1: Remove Hauler Poly Box

## Step 2: Unwrap and Untie the Skid

Before




After



## Step 3: Remove the Aluminum Side Rails

During shipment and operation, the aluminum side rails pinch the fiberglass body of the Cold Storage Unit to the Conversion Mount Frame. For installation purposes, the Conversion Mount Frame must be separated from the body of the Storage Unit. Therefore, the aluminum side rails must be removed. They must be attached to the final assembly later, so please save them,

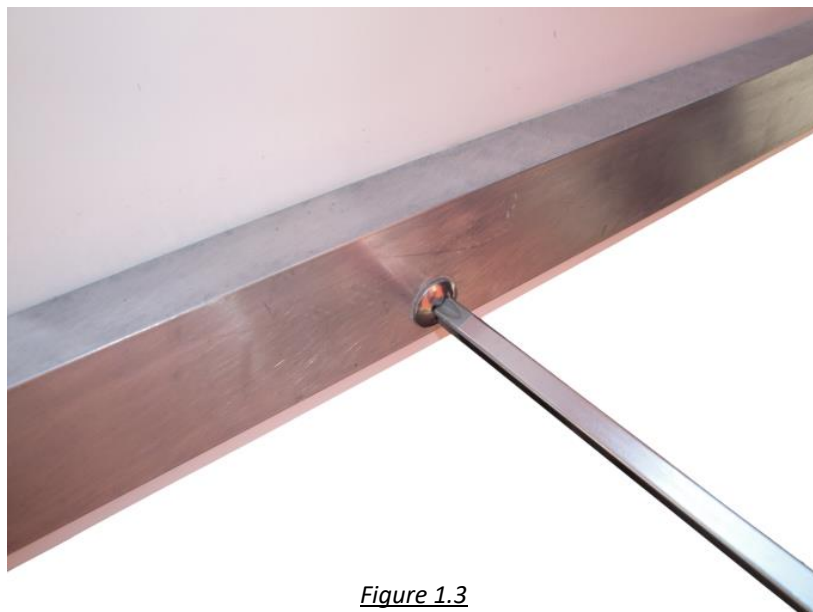

*Figure 1.3*

*Aluminum side rail being removed*

## **Step 4: Separate Storage Unit from the Conversion Mount Frame**

Lift the Cold Storage away from the Conversion Mount Framing.

# **Section 2: Install the Conversion Mount Frame**

## **Step 1: Install the Fairway Café supplied Body Mount Plate**

Remove the factory hardware located behind the cabin seats (see Figure 2.1a) and save for later. Place the Fairway Café Body Mount Plate in the correct position, located behind the cabin seats (see Figure. Attached with the factory hardware and leave securement arms in the upright position (see Figure 2.1b). They will be used later.

*Figure 2.1a*

*Hardware being removed*



*Figure 2.1b*

*Body Mount Plate placed and secured*



## Step 2: Attach the Conversion Mount Frame to the factory pivot point

Remove the E-Z-GO factory retainer pin, retainer clip from the factory polybox pivot point (See Figure 2.2a). Place Fairway Café Conversion Mount Frame on the utility vehicle bed and align the frame's pivot bracket to the factory pivot point (See Figure 2.2b). Secure with factory hardware (See Figure 2.2c).

*Figure 2.2a*

*Factory pin and retainer clip (left) removed from factory bushing (right)*



*Figure 2.2b*

*Pivot bracket aligned to factory pivot point*



*Figure 2.2c*

*Pivot bracket secured with factory pin and retainer clip*






### **Step 3: Attach factory shock and safety cable to the Conversion Mount Frame**

Make sure the shock and bed stop safety cable are attached to the factory bed frame (See Figure 2.3a). Attach the shock and bed stop safety cable to Fairway Café Conversion Mount Frame (See Figure 2.3b and 2.3c).

*Figure 2.3a*

*Shock and safety cable secured to rear of factory frame*

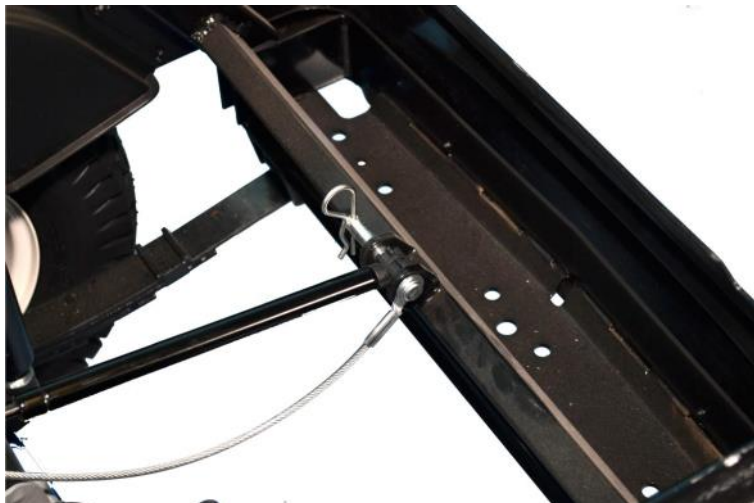

*Figure 2.3b*

*Shock and safety cable being pushed through the Mount Frame*



*Figure 2.3c*

*Shock and safety cable secured to Conversion Mount Frame with factory retainer clip*




## **Step 4: Lower the Safety Arms on the Body Mount Plate**

The Safety Arms (located on the Body Mount Plate) will ensure the Conversion Mount Frame is locked in place during operation, while allowing convenient service access later. They must be lowered to the locking position during operation, and prior to the cold storage install (see Figure

*Figure 4.1*

*Safety Arms in the locking position*

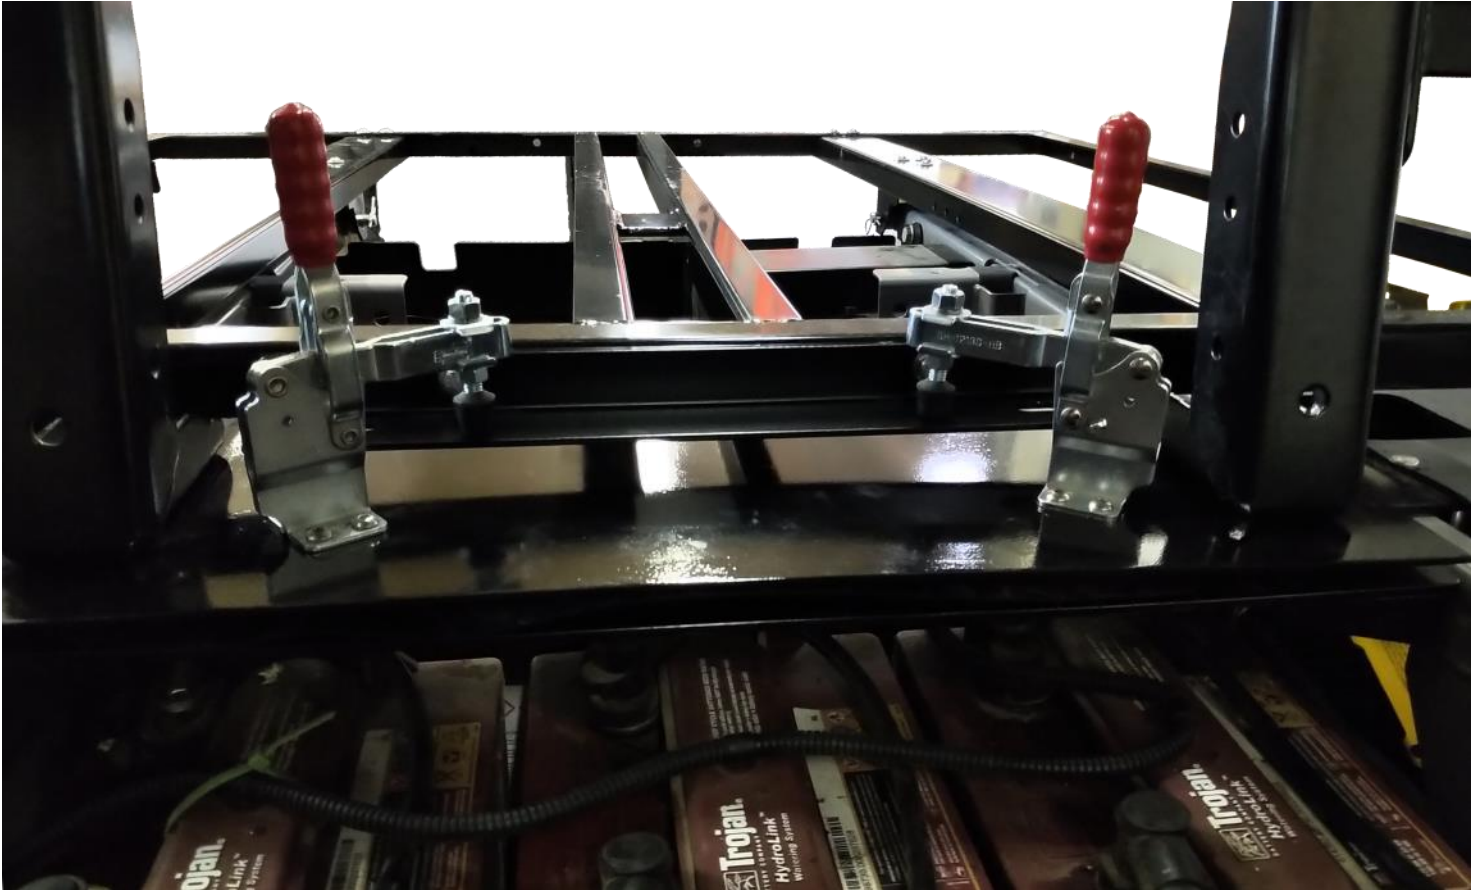

# Section 3: Installing the Storage Unit

## Step 1: Lift the Storage Unit onto the Conversion Mounting Frame

Please note: The Cold Storage and Dry Goods Storage units are already bolted and secured together upon delivery. They do not need to be separated prior to installation or lifting.

Lift the complete Storage Unit, and place it on the Conversion Mounting Frame with proper orientation in mind. The Garbage Door should be located on the back of the Cold Storage Unit.

Align the pilot holes on the Storage Unit to the pilot holes on the Conversion Mounting Frame. These pilot holes do have some tolerance in regards to positioning, so don't be alarmed if they seem slightly off.

*Figure 3.1*



## Step 2: Secure the Aluminum Side Rails to the Storage Unit and Conversion

### Mount Frame


# IMPORTANT!!!

The aluminum siding is specifically cut for each side. They are not interchangeable. If the holes do not align correctly, it is likely you have the aluminum siding on the wrong side(s). Do not drill more holes, as this could damage the integrity of the structure.

Please refer to the image and text below in regards to proper orientation and installation

Figure 3.2

*Installation of the Aluminum Side Rail with proper orientation*

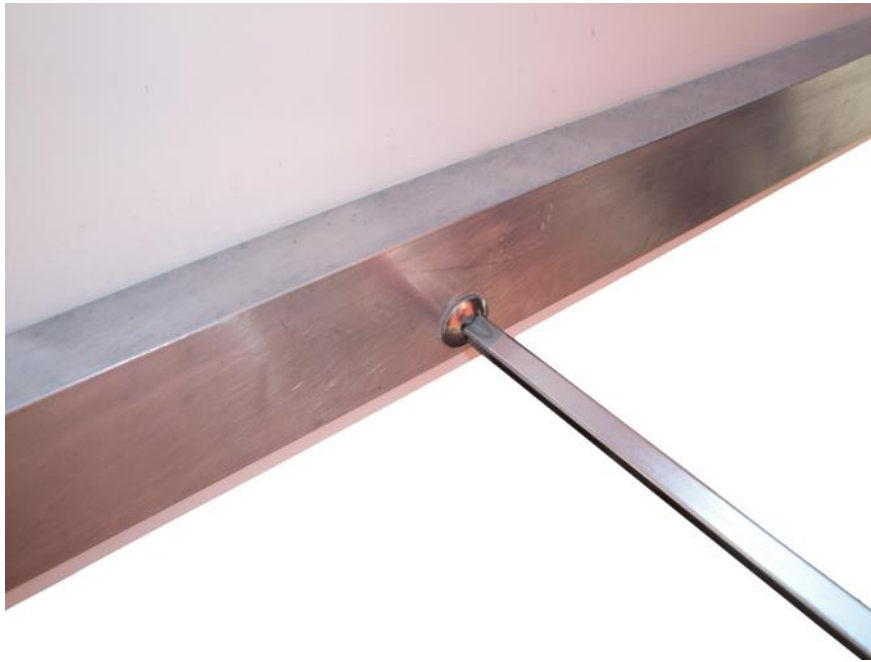

The Aluminum Side Rails have dual purposes:

- They safely pinch/secure the fiberglass body of the Storage Unit to the steel Conversion Mounting Frame
- They act as side rail bumpers during day-to-day operation of the beverage cart

Make sure the Aluminum Side Rails are set up correctly. The upper lip of the Aluminum Side Rail should rest on top edge of the Cold Storage Unit's bezel, not the underside of the Cold Storage Unit. The holes of the Aluminum Side Rail should align with the pilot holes of the fiber glass.

Once aligned correctly, secure with the supplied bolts and nuts



# Section 4: Installing Roof/Fabric

## Step 1: Remove Cabin Canopy (Keep Cabin Supports On)

## Step 2: Align Roof to Anchors, Lay Flush and Lock with Hex Key

*Figure 4.1b*



*Align*




*Lay Flush, then Lock*

## Step 3 Secure Roof to Cabin Support

Using the included hardware, secure the Long Roof to the Cabin Supports (see Figure 4.3)

*Figure 4.3*

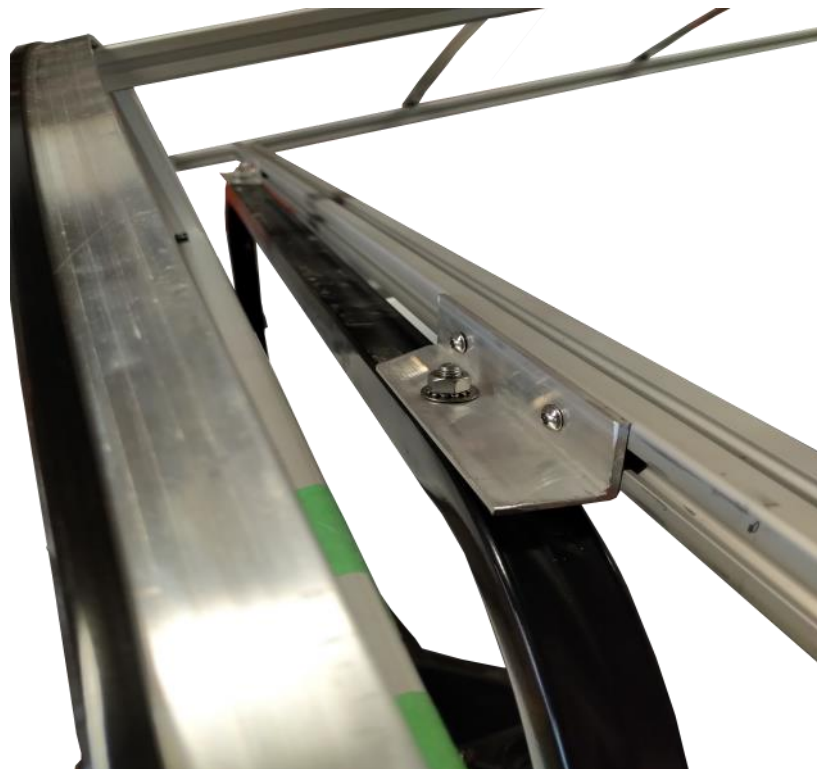

## **Step 4: Snap Fabric onto Adjustable Snaps, Located on the Edges of the Roof**

Fabric Roof and other accessories are located within the rear cold storage area upon shipment (see Figure 4.4)

*Figure 4.4*



## **Congratulations!**

We truly appreciate your purchase, and hope this document has helped you with the installation of our product. We are committed to providing the best customer service on the market. In our minds, it's no different than teeing up on the golf course: You strive for the best results every time.

Feel free to give us a call if you have any question or concerns regards our products, parts, or the installation of our products. You can reach us at the phone number located below during hours of operation, or you can visit our website (also located below) and fill out a contact form at any time.

Our hours of operation are as follows (Eastern Standard Time):

**Monday to Thursday: 8 AM to 5 PM**

**Fridays: 8 AM to 3 PM**

Sincerely,

The Fairway Café Team



[www.golfbeveragecart.com](http://www.golfbeveragecart.com)



1 (866) 603-2220